

## Compatible Printers

Brand	Model	Notes
HP	Business Inkjet 1200d (100-240V)	2
HP	Deskjet 5650, 5652 (100-240V)	3
HP	Deskjet 450 (100-240V), 450ci (240V)	3
HP	Deskjet 6122	2
HP	Deskjet 340, 340CBI, 350 (110-120V)	3
HP	Deskjet 420, 420C	3
HP	Deskjet 648C, 695C, 697C	2
HP	Deskjet 812C, 842, 880C, 882C, 890Cse, 890Cxi, 895Cse, 895Cxi	2
HP	Deskjet 940Cse, 940Cxi, 960Cse, 960Cxi, 970Cse	2
HP	Deskjet 1120C, 1120Cse, 1120Cxi	2
Epson	LX300, LX300+	1
Epson	Stylus Color 200 (220-240V)	1
Epson	Stylus Color 600	4
Panasonic	KX-P1150 (100-240V) <i>emulates Epson</i>	1
Citizen	GSX-190 (100-240V) <i>emulates Epson</i>	1
Canon	BJ200ex	5
Canon	BJ30	4
Okidata	Microline 320 (220-240V)	1
Olivetti	Nomad-Jet 100	7
Star	NX1000, NX1001	6

### Notes:

1. Compatible with reader set to default 'Epson' output.
2. Compatible with reader set to 'HP' output (readers equipped with current versions of HP software driver released February 2002).
3. Black ink cartridge only and current versions of 'HP' output (readers equipped with current versions of HP software driver released February 2002).
4. Contact BioTek's Technical Assistance Center at [TAC@biotek.com](mailto:TAC@biotek.com) for printer setup instructions.
5. Place dipswitches #4, #11 = up.
6. Place dipswitches #7 = on.
7. Available only in Europe.

## Known Incompatible Printers

Brand	Model	Notes
HP	Deskjet 3820	Not compatible
HP	Deskjet 5150	Not compatible
Epson	C84	Not compatible
Epson	440	Not compatible
Canon	i560	Not compatible