



CX 5500

**FILTER UNIT FOR PARTICLES,
FUMES AND GASES**

NEDERMAN CX 5500

AN EXTRACTION UNIT WITH FILTER FOR INDIVIDUALLY ADAPTED SOLUTIONS.


- CX 5500 can easily be placed close to your working area. It has a high efficiency filter and requires little space. Mini arms FX 32, fume cabinets FC 35, down flow grilles FD 23, hoods etc. can be connected to the CX 5500 unit.
- CX 5500 can be used within a different number of areas like, electronic, dental, manicure/hair-dressing, laboratories to name but a few.

- Flexible extraction unit for easy and quick installations.
- The filters are tested by the Swedish National Testing and Research Institute.


- Filter unit CX 5500
- Accessories
 - Exhaust air kit excl. hose

Part.no.
503141


571670

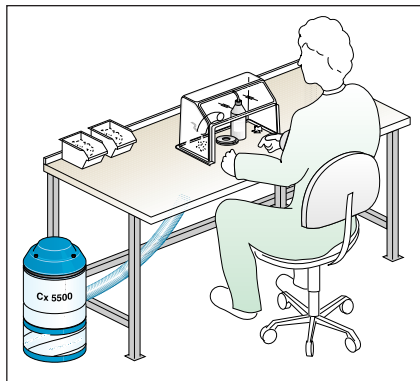

CX 5500 connected to FC 35. Extraction of fumes and gases when mixing and moulding.

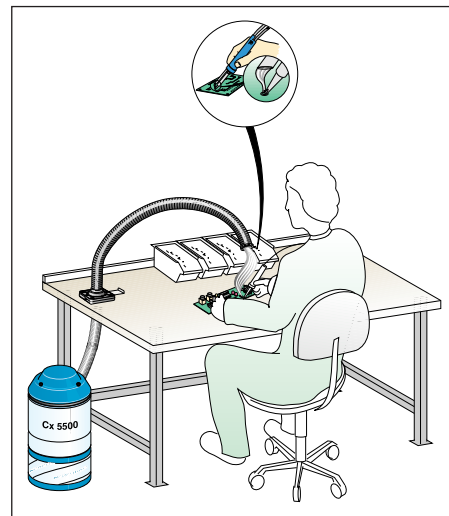

CX 5500 connected to mini arm FX 32 E. Extraction of soldering fume with an ESD arm. Alt. up to 2 on tip extraction points.

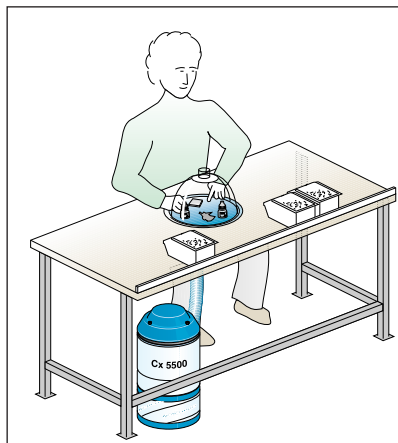

CX 5500 connected to the down flow grille FD 23. Extraction of glue and solvent fumes.

TECHNICAL DATA

Height.....	400 mm
Diameter.....	255 mm
Weight.....	8,6 kg
Sound Level.....	43 dB (A)
Air Flow.....	30 m3/h
Voltage.....	230 V, 50 Hz
Power.....	85 W
Filtration degree.....	99,97% acc. to DOP
Connection.....	Ø 32 mm

Right reserved for modification of design and measurements.

Nederman[®]
Improving your workspace

AB Lestrostatic
Box 314
SE-532 24 Skara, Sweden
Tel Int. +46 511-34 24 00
Fax Int. +46 511-34 24 30
e-mail: lectro@nederman.se
Internet: nederman.se