

EXTRACTOR KIT 500



EK 500 is a compact filter solution with very low sound level. The air passes through an efficient filter with particle and gas filtration.

The filter captures the noxious fumes and gases that normally occur when soldering, gluing and working with solvents.

The filter is disposable and is easily changed. The arm is one meter long and is easily mounted without tools on to the workbench. It is flexible in all directions.




The compact size and the very low noise level allows the Kit to be positioned close to the user.


The air flow in the arm can be regulated by a damper. The extraction hood supplied with the kit improves the capture ability for heavy and light gases. There are another two hoods shown under accessories.

Extractor Kit 500


Part.no. 510634

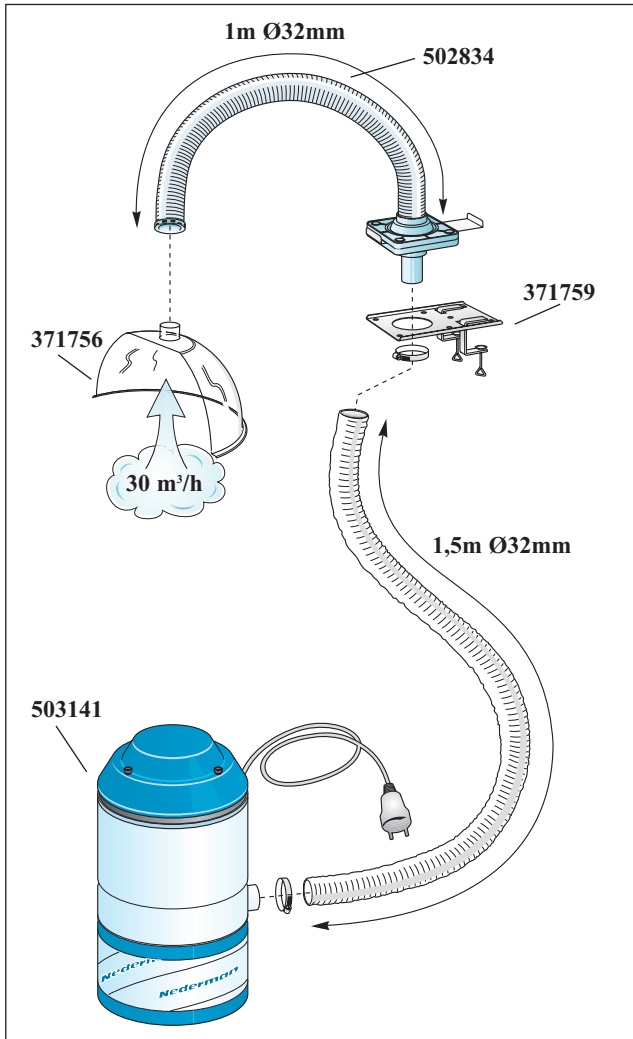

Accessories

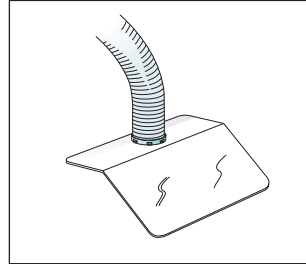

Flange hood
WxH: 150x150 mm
Part.no. 371525

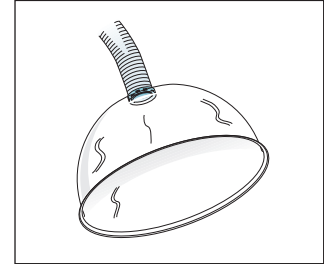

Dome hood
Ø 260 mm
Part.no. 371757

For further accessories see "System 32".

Technical data

Voltage:	230 V
Power:	80 W
Soundlevel:	43 dB(A)
Filter efficiency DOP:	99.97 %
Weight:	8.6 kg
Height:	400 mm
Diameter:	255 mm

PRODUCT LEAFLETS

Nederman has a wide range of products for capture and filtration of particles, fumes and gases. See separate product leaflets for more information.

