

HUURRE G r o u p

Clean rooms



Huurre Group




The Huurre Group is a multinational company with a true commitment to quality. This is evident throughout the 50 year history of the company. For the customer, this means assured and consistent quality of products and services. All clients benefit from active project management and strict adherence to systematic project planning.

Continuous development of products and services are based on ISO 9001 and ISO 14001 certified quality and environmental systems, all of which is regulated and audited by Lloyds of London. Conscious of the worlds environment, Huurre monitor the effects of all process to ensure we are as environmentally friendly as possible.

Our quality focused approach is evident at our production facilities in Ylöjärvi, where our clean room panels and doors are manufactured. Investment in our manufacturing equipment and training of our skilled workers, contributes to our ability to supply a consistent high quality with accuracy.




As one of the largest manufacturers of insulated panels and doors in Europe the Huurre Group's factory represents the latest in automation technology and quality.

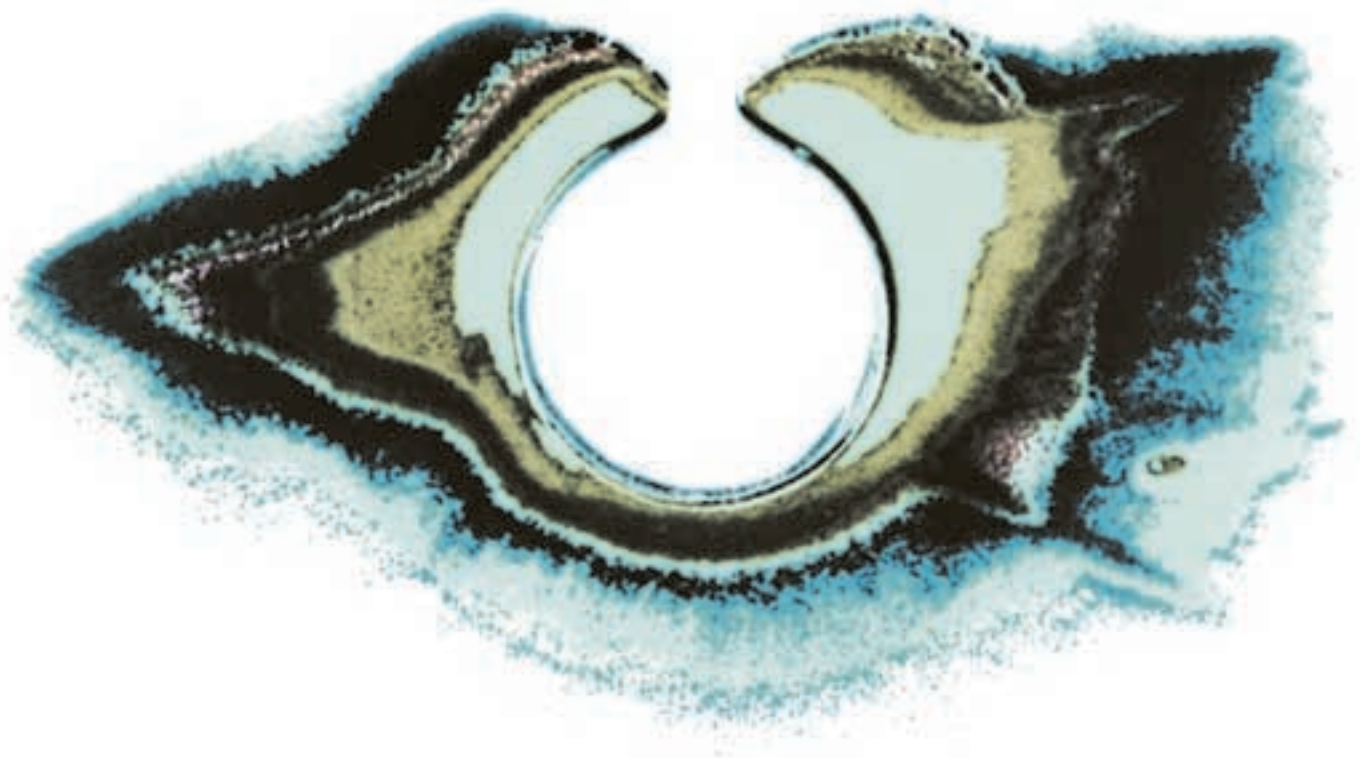

'Impurities' the enemies
of clean rooms.

As you read this, there are
millions of particles
suspended in the air around you.
These impurities can
invalidate the results of
valuable product development.
The Huurre clean room system
eliminates the free movement
of these particles.



You are now
entering the Huurre
world of clean rooms.
This time you do not
need to put on special
clean room clothing or
walk through air locks.
'Simply turn the page'.

Benefit from Huurre's expertise in clean room construction.



We have had many years of experience in producing clean rooms for the pharmaceutical, electronic and optical industries, as well as the research sector and our satisfied customer list is extensive both in Finland and abroad. Our expertise covers every stage from initial planning to installation and commissioning.

A typical shipment includes clean room panels, doors, windows and other fittings for the basic structure. If required, Huurre will supply clean room facilities on a total turnkey basis.

The construction of an efficient clean room system requires in-depth expertise all of which is available from the Huurre Group. Most are manufactured on a tailor made basis to suit specific site requirements.



Clean rooms are not all alike, quality shows in the detail.

Our clean rooms are manufactured using rapid-to-install sandwich panels which contribute to simple erection with access points. Internal and external surfaces are polyester coated galvanised steel sheet, the core is pressure foamed polyurethane which contains no harmful substances to the environment. When erected Huurre clean rooms offer trouble-free hygiene, temperature, humidity and air pressure control.



All panels for clean room construction have smooth surfaces for easy cleaning. Double action camlocks allow rapid easy installation and give structural strength to the room. Maximum panel width is 1200 mm with lengths up to 6000 mm, with a thickness of 65 mm.



The small details in clean room construction such as windows and doors exemplify our total all round approach to quality and horizontal surfaces that can gather impurities are reduced to an absolute minimum.


If you have a special requirement think Huurre.




Versatility, is one of the strongest advantages when buying a Huurre clean room. Our modular construction enables flexibility even at a later date should you decide to expand the facility or divide existing rooms.

Huurre clean rooms can be tailor-made to your exact requirements and specification, just contact us if you have a requirement.

We have also developed a convenient 'Pass-through-box' ideal for moving objects or products from one clean room to another, without the risk of spreading unwanted particles.

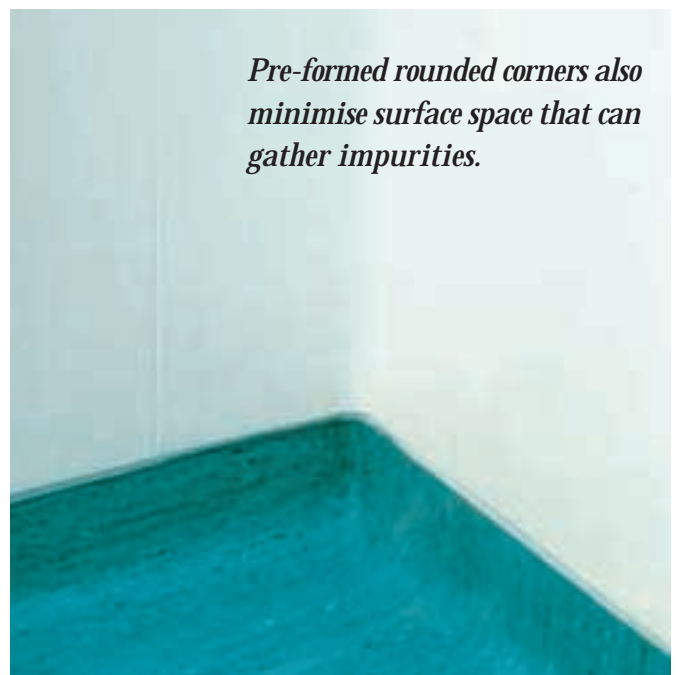

Pre-formed rounded corners also minimise surface space that can gather impurities.

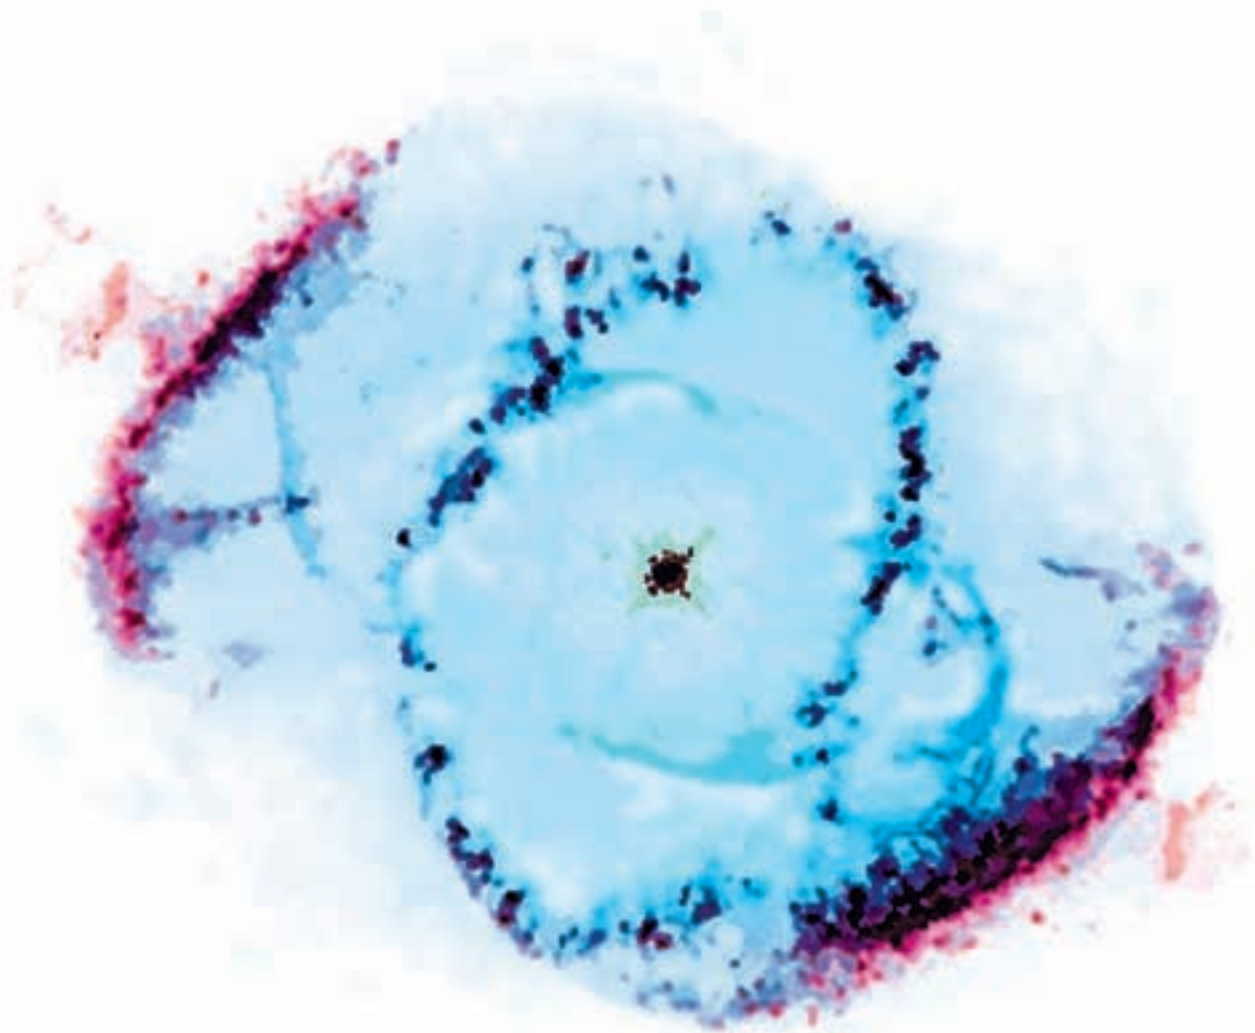

Impurities are all around us.

But our expertise is there
for you. Because the invisible
enemy cannot be allowed to
destroy your achievements. Just
contact your Huurre expert.



Welcome back to
our normal particle
polluted air. Huurre
Group's clean room experts
and technicians are ready and
pleased to assist you with any
questions or technical
information that you may
require. Please do
contact us.



The Hurre Group is a multinational company specialising in refrigeration technology and special projects. Our continued success is based on our customer focused approach and continued commitment to quality. Environmentally sustainable production combined with innovative development will ensure we continue to grow in the years to come.

International business and our overseas subsidiaries and distributors makes up more than 60% of our Group's turnover. Our main markets are Scandinavia, Central and Eastern Europe and Asia.

HURRE G R O U P

Hurre Group Oy
P.O. Box 127
FIN-33101 Tampere
Finland
Tel. +358 3 38 800
Fax +358 3 3880 288

E-mail: export@hurre.com
<http://www.hurre.com>



The quality of Hurre Group Oy's operations is controlled by certified ISO 9001 and ISO 14001 Quality Management Systems.

CE marked products. Manufacturer reserves the right to change technical specifications without notice.