


TURBO AND ACTIVE GAUGE (TAG) CONTROLLER

Edwards Turbo and Active Gauge (TAG) controller is a small low cost pumping system controller, suitable for a wide range of vacuum applications and compatible with all Edwards EXT and nEXT turbomolecular pumps. The large LED display shows the pump speed or vacuum pressure and an easy to use push button interface enables ease of operation and control.

TAG controller will also run a backing pump, air vent valve, an air cooler, and an Edwards active gauge, making the TAG a versatile system controller.

This compact 24 V TAG controller is ideal for use on bench-tops or suitable for mobile platforms where space is limited yet functionality and reliability are essential.

NOTE: TAG controller does not contain an in-built power source. A 24 V power supply is available from Edwards or users must supply their own.

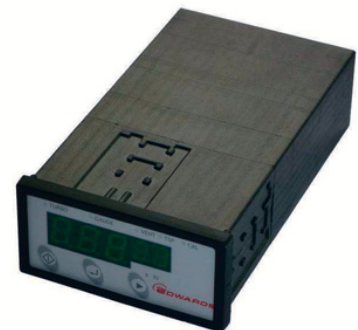

FEATURES AND BENEFITS

• Turbomolecular pump control capabilities

- Turbomolecular pump start/stop
- Display pump speed as % of full speed
- Visual performance display; acceleration deceleration or normal running
- Control of a single vent valve when connected to the turbomolecular pump controller with choice of three vent modes
- Vent when pumping speed drops below 50%
- Controlled vent from full speed then hard vent at 50%
- Fan mode, continuous power to the vent port so the system will not vent. Alternatively it may be used to power an air cooler connected directly to the pump

• Gauge control and display functions

- Control of a single Active gauge: APG, AIM, ASG or WRG gauge
- Choice of pressure display: mbar, Torr, Pascal or Volts
- Zero adjustment/calibration of gauges
- Use of gauge signal to start/stop the turbomolecular pump

• Backing pump control, plus more

- TAG has the additional capability to control a backing pump
- 24 V XDD1 may be connected directly and will share power with TAG/turbomolecular pump
- nXDS and XDS35i pumps can be controlled by the TAG logic interface
- Other mains backing pumps may need a relay (see instruction manual for details)
- A single 24 V isolation valve can be controlled and powered from the TAG
- For pumping large chambers the TAG allows delayed start of the turbomolecular pump to either a time or pressure set point


TECHNICAL DATA

Description	TAG Controller
Max input power	240 W
Mains input	
Electrical supply	24 V d.c.
Power consumption (max)	5 W
Auxiliary terminals	
Air cooling fan	24 V d.c. 3.6 W max
Turbomolecular pump	24 V d.c. 160 W max
Dimensions	96 x 48 x 165 mm
Mass	0.3 kg
Operating temp	0 to 40 °C
Storage temp	-30 to 70 °C
Max ambient operating humidity	90% RH non-condensing at 40 °C
Max operating altitude	2000 m
Enclosure rating	IP20 (IP40 when panel mounted)

ORDERING INFORMATION

Description	Material number
TAG controller	D39592000
External power supply	D39592800
Mains lead — UK plug	D40013025
Mains lead — European plug	D40013030
Mains lead — US plug	D40013120

- A. TAG controller
- B. Mains cable
- C. WRG-S-NW25
- D. Backing pump
- E. Turbomolecular pump
- F. Air-cooler
- G. Pump extension cable
- H. Pump extension cable (optional)
- J. Active gauge cable
- K. Power supply

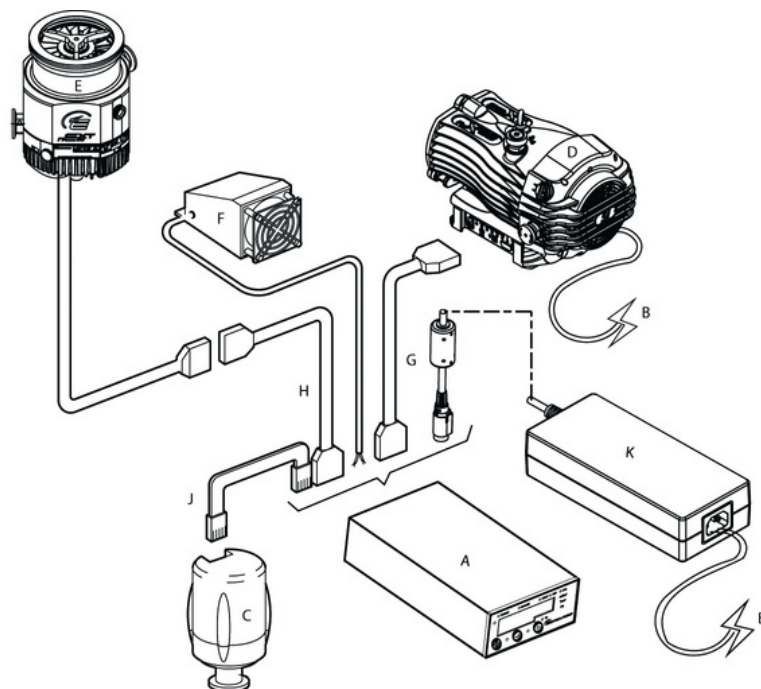

Publication Number: 3601 0206 01

© Edwards Limited 2024. All rights reserved Edwards and the Edwards logo are trademarks of Edwards Limited Whilst we make every effort to ensure that we accurately describe our products and services, we give no guarantee as to the accuracy or completeness of any information provided in this datasheet.

Edwards Ltd, registered in England and Wales

No. 6124750, registered office: Innovation Drive, Burgess Hill, West Sussex, RH15 9TW, UK.



WolfLabs

Pricing on any accessories shown can be found by keying the part number into the search box on our website.

The specifications listed in this brochure are subject to change by the manufacturer and therefore cannot be guaranteed to be correct. If there are aspects of the specification that must be guaranteed, please provide these to our sales team so that details can be confirmed.

www.wolflabs.co.uk

Tel : 01759 301142

Fax : 01759 301143

sales@wolflabs.co.uk

Please contact us if this literature doesn't answer all your questions.