

CO₂BUDDY

Personal CO₂ Safety Alarm

The **CO₂BUDDY** personal alarm is designed to detect carbon dioxide (CO₂) and warn of any dangerous levels in confined spaces, providing continuous protection for those working in an environment where CO₂ is present. This extremely lightweight personal alarm can be easily clipped to a pocket or belt, or can be attached to a lanyard.

The **CO₂BUDDY** is suitable for a wide variety of applications where CO₂ is used including pub and bar cellars, walk in coolers, fast food outlets, agricultural grow houses, medical laboratories and food packaging plants. **CO₂BUDDY** ensures personal protection for delivery drivers, servicing engineers and maintenance personnel who work in multiple locations where CO₂ is used but is not guaranteed to be monitored by a fixed system.

Charged via a Micro USB cable, the **CO₂BUDDY** is easy and convenient to keep fully powered. The **CO₂BUDDY** is a robust, but lightweight safety alarm from Analox, one of the world's leading gas monitor companies with facilities in the UK and US.

Standards including EH40 in Europe and OSHA throughout the US mandate that employees should not be exposed to potentially dangerous levels of CO₂ as it can prove to be highly toxic in very small concentrations.

CO₂BUDDY has two alarm levels (low and high) which are uniquely identified to the user through different audible and visual sequences. **CO₂BUDDY** also monitors a time weighted average (TWA) of exposure to CO₂ over an eight hour period and will go into alarm if the TWA of CO₂ is above 0.5%.

The low and high alarm levels can easily be altered from the factory defaults by selecting from a choice of alarm configurations during commissioning of a unit.

Alarm configurations supported include 0.5% and 1.5%, 1.5% and 3.0%, 0.5% and 1.0%, 1.0% and 2.0%.

CO₂

KEY FEATURES

Lightweight - Max weight 70g

Rechargeable battery

Minimum 48 hours battery life

Single button operation

Fresh air calibration

Low maintenance

Choice of low and high alarm point configurations available

TWA Alarm

Every day, we **save lives.**

ANALOX
Sensor Technology

SYSTEM SPECIFICATIONS

Display: LCD

Power: Minimum of 48 hours of operation with low battery warning

Charging: 2 hours at 5V, 300mA


Max Dimensions: 75mm x 63mm x 34mm

IP Rating: 54

Mounting: Pocket, Belt or Lanyard

Approvals: CE, FCC

Alarm indicators: Audible, Red Strobe, Vibration

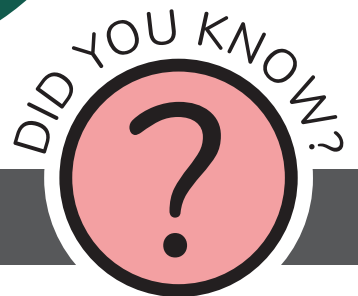

An increase as small as 0.5% of CO₂ can be harmful to human health. Everyday, we **save lives**.

Analox has a policy of continuous improvement and we reserve the right to upgrade or change specifications without prior notice. If you require a datasheet in another language please contact us.

www.analoxsensortechology.com



UK & USA
Quality Design,
Manufacturing & Service

ANALOX
Sensor Technology



Wolflabs

Wolf Laboratories Limited

www.wolflabs.co.uk

Tel: 01759 301142

Fax: 01759 301143

sales@wolflabs.co.uk



Use the above details to contact us if this literature doesn't answer all your questions.

Pricing on any accessories shown can be found by keying the part number into the search box on our website.

The specifications listed in this brochure are subject to change by the manufacturer and therefore cannot be guaranteed to be correct. If there are aspects of the specification that must be guaranteed, please provide these to our sales team so that details can be confirmed.

