



Multiparameter Waterproof Meters

Multiparameter measurement in compact,
IP67 rated waterproof enclosures

 **HANNA**[®]
instruments

HI98194

Multiparameter Waterproof Meter

pH, ORP, EC, TDS, Resistivity, Salinity, Seawater σ , Dissolved Oxygen, Atmospheric Pressure and Temperature

- **Waterproof**
 - IP67 rated waterproof, rugged enclosure for meter, IP68 for probe
- **Digital probe**
 - Digital probe with integral temperature sensor and three ports for pH (ORP), EC and DO sensors
- **Color coded, field replaceable sensors**
- **Auto-sensor recognition**
- **Quick calibration feature**
- **Automatic barometric pressure compensation**
- **Automatic temperature compensation**
- **Automatic logging**
 - Store up to 45,000 samples
- **Log-on-demand**
 - Store measurement data at the press of a button
- **GLP**
 - GLP data provides data from previous five calibrations to ensure Good Laboratory Practices are met
- **Dedicated help key**
 - On-screen context specific help is readily available at the press of a button
- **Backlit LCD display with multifunction virtual keys**
- **Intuitive keypad**
 - Dedicated and virtual soft keys
- **Connectivity**
 - PC connectivity via opto-isolated micro-USB with Hanna software
- **Up to 360 hours of battery life**
 - Powered by (4) 1.5V AA batteries



- **Quick Connect Probe**
 - Fast, secure and waterproof connection



For Universal Applications

HI98184 provides multiparameter measurement in a compact and rugged, IP67 waterproof enclosure. Ideal for demanding applications, this meter features our rugged, quick connect digital probe with field replaceable sensors.

A backlit, graphic LCD provides easy to read resolution even in low-lit areas. A combination of dedicated and soft keys allows easy, intuitive operation in a choice of languages.

Data Logging

The HI98194 allows users to store up to 45,000 continuous or log-on-demand samples with logging intervals from one second to three hours. Logged data can be later transferred to a PC with the HI920015 micro USB cable and Hanna HI9298194 software.

Dedicated HELP Button

The contextual HELP menu can be accessed to obtain on-screen information and assistance about each feature at the touch of a button.


Quick Connect Probe

The HI7698194 probe features a quick connect DIN connector to make attaching and removing the probe simple and easy.




HI9828-25
Quick Calibration
solution

- **Field ready with Quick Calibration solution**
 - Standardize pH and conductivity with one calibration solution
 - Simply screw the calibration beaker filled with HI 9828-25 (500 mL) or HI9828-27 (1 gallon) solution onto the probe, select "Quick calibration" from the menu and press OK. Individual calibration may also be performed using multiple calibration points

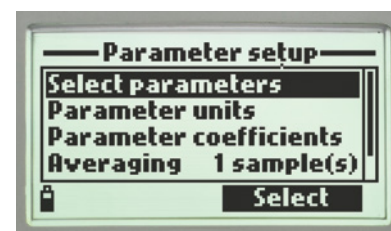

- **Setup**
 - Extensive setup screen features

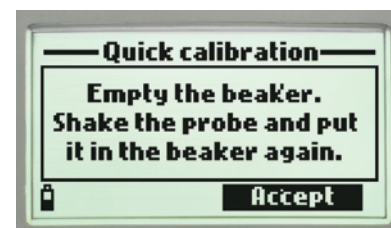

- **Guides**
 - On screen guides are displayed to help you while performing procedures such as calibration

pH: Specific Features

- **Calibration**
 - Up to a three-point calibration with five standard buffers and one custom buffer available
- **pH in mV option**
 - Useful for diagnostics
- **GLP data**
 - Offset, slope, date, time and buffers used
- **Automatically temperature compensated readings**
- **pH or pH/ORP field replaceable sensors**
 - Gel-filled and maintenance free
 - Double junction for reduced contamination of reference cell

EC/TDS/Resistivity: Specific Features

- **Calibration**
 - Single-point calibration from six standards (84 $\mu\text{S}/\text{cm}$, 1,413 $\mu\text{S}/\text{cm}$, 5.00 mS/cm, 12.88 mS/cm, 80 mS/cm, 111.8 mS/cm or custom point)
- **Temperature compensation**
 - Automatic Temperature Compensation
 - Configurable temperature coefficient range from 0.00 to 6.00%/°C
 - Choice of reference temperatures at 20 or 25°C
 - Absolute conductivity can be displayed along with the temperature compensated value
- **Auto-ranging**
- **Salinity readings**
 - Practical Salinity Scale (PSU) based on conductivity calibration

Dissolved Oxygen: Specific Features

- **Choice of units**
 - Display units in % saturation or ppm (mg/L)
- **Salinity compensation for saline waters**
 - Manual entry of salinity values
 - Readings compensated for salinity effects
- **Built-in barometer**
 - Automatic compensation for changes in atmospheric pressure
 - User selectable units
- **Temperature compensation**
- **Polarization**
 - Automatic polarization of probe at startup
- **Membrane caps**
 - Ready-to-use HDPE pre-tensioned membrane caps are easy to replace



- **Rugged carrying case with custom insert included**

HI98194 Probe and Sensor Features and Specifications



Probe Specifications

HI7698194

Sensor Inputs	three (pH or pH/ORP, DO, EC)	
Sample Environment	fresh, brackish, seawater	
Waterproof Protection	IP68	
Operating Temperature	-5 to 55°C	
Storage Temperature	-20 to 70°C	
Maximum Depth	20 m (66')	
Dimensions (without cable)	342 mm (13.5"); 46 mm (1.8") dia	
Weight (without sensors)	570 g (20.1 oz.)	
Cable Specification	multistrand-multiconductor shielded cable with internal strength member rated for 68 kg (150 lb.) intermittent use	
Wetted Materials	Body	ABS
	Threads	Nylon
	Shield	ABS / 316 SS
	Temperature Probe	316 SS
	O-rings	EPDM

Multi-function Sensor

- [Quick sensor replacement](#)
 - Sensor replacement is quick and easy with field replaceable, screw type connectors and are color coded for easy identification. These meters automatically recognize sensors.



Sensor Specifications		HI7698194-0	HI7698194-1	HI7698194-3	HI7698194-2
Description		pH sensor	pH/ORP sensor	EC sensor	DO sensor
Measurement Type		pH, mV (pH)	pH, mV (pH), ORP	EC	DO (% saturation and concentration)
Measurement Range		0.00 to 13.00 pH; ± 600.0 mV	0.00 to 13.00 pH; ± 600.0 mV; ± 2000.0 mV	0.0 to 200.0 mS/cm; 0.0 to 400 mS/cm (absolute)	0.0 to 500.0 %; 0.00 to 50.00 mg/L
Temperature Range		-5 to 55°C	-5 to 55°C	-5 to 55°C	-5 to 55°C
Color Code		red	red	blue	white
Materials	Tip	glass (pH)	glass (pH); Pt (ORP)	stainless steel electrodes AISI 316	cat/an: Ag/Zn
	Junction	ceramic	ceramic		membrane: HDPE
	Body	PEI	PEI	ABS/epoxy	white top ABS
	Electrolyte	gel	gel		
	Reference	double	double		
Maintenance Solution		HI70300 (storage solution)	HI70300 (storage solution)	none	HI7042S (DO electrolyte)
Dimensions		118 x 15 mm	118 x 15 mm	111 x 17 mm	99 x 17 mm
Depth		20 m (65')	20 m (65')	20 m (65')	20 m (65')

Specifications	HI98194	
pH / mV	Range	0.00 to 14.00 pH / ± 600.0 mV
	Resolution	0.01 pH / 0.1 mV
	Accuracy	± 0.02 pH / ± 0.5 mV
	Calibration	automatic one, two, or three points with automatic recognition of five standard buffers (pH 4.01, 6.86, 7.01, 9.18, 10.01) or one custom buffer
ORP	Range	± 2000.0 mV
	Resolution	0.1 mV
	Accuracy	± 1.0 mV
	Calibration	automatic at one custom point (relative mV)
EC	Range	0 to 200 mS/cm (absolute EC up to 400 mS/cm)
	Resolution	manual: 1 μ S/cm; 0.001 mS/cm; 0.01 mS/cm; 0.1 mS/cm; 1 mS/cm; automatic: 1 μ S/cm from 0 to 9999 μ S/cm; 0.01 mS/cm from 10.00 to 99.99 mS/cm; 0.1 mS/cm from 100.0 to 400.0 mS/cm; automatic mS/cm: 0.001 mS/cm from 0.000 to 9.999 mS/cm; 0.01 mS/cm from 10.00 to 99.99 mS/cm; 0.1 mS/cm from 100.0 to 400.0 mS/cm
	Accuracy	$\pm 1\%$ of reading or ± 1 μ S/cm whichever is greater
	Calibration	automatic single point, with six standard solutions (84 μ S/cm, 1413 μ S/cm, 5.00 mS/cm, 12.88 mS/cm, 80.0 mS/cm, 111.8 mS/cm) or custom point
TDS	Range	0.0 to 400.0 ppt (g/L) (the maximum value depends on the TDS factor)
	Resolution	manual: 1 ppm (mg/L); 0.001 ppt (g/L); 0.01 ppt (g/L); 0.1 ppt (g/L); 1 ppt (g/L); automatic: 1 ppm (mg/L) from 0 to 9999 ppm (mg/L); 0.01 ppt (g/L) from 10.00 to 99.99 ppt (g/L); 0.1 ppt (g/L) from 100.0 to 400.0 ppt (g/L); automatic ppt (g/L): 0.001 ppt (g/L) from 0.000 to 9.999 ppt (g/L); 0.01 ppt (g/L) from 10.00 to 99.99 ppt (g/L); 0.1 ppt (g/L) from 100.0 to 400.0 ppt (g/L)
	Accuracy	$\pm 1\%$ of reading or ± 1 ppm (mg/L) whichever is greater
	Calibration	based on conductivity calibration
Resistivity	Range	0 to 999999 $\Omega \cdot \text{cm}$; 0 to 1000.0 k $\Omega \cdot \text{cm}$; 0 to 1.0000 M $\Omega \cdot \text{cm}$
	Resolution	dependent on resistivity reading
	Calibration	based on conductivity calibration
Salinity	Range	0.00 to 70.00 PSU
	Resolution	0.01 PSU
	Accuracy	$\pm 2\%$ of reading or ± 0.01 PSU whichever is greater
	Calibration	based on conductivity calibration
Seawater σ	Range	0.0 to 50.0 σ_t , σ_θ , σ_{15}
	Resolution	0.1 σ_t , σ_θ , σ_{15}
	Accuracy	± 1 σ_t , σ_θ , σ_{15}
	Calibration	based on conductivity calibration
Dissolved Oxygen	Range	0.0 to 500.0%; 0.00 to 50.00 ppm (mg/L)
	Resolution	0.1%; 0.01 ppm (mg/L)
	Accuracy	0.0 to 300.0%: $\pm 1.5\%$ of reading or $\pm 1.0\%$ whichever is greater; 300.0 to 500.0%: $\pm 3\%$ of reading; 0.00 to 30.00 ppm (mg/L): $\pm 1.5\%$ of reading or ± 0.10 ppm (mg/L), whichever is greater; 30.00 ppm (mg/L) to 50.00 ppm (mg/L): $\pm 3\%$ of reading
	Calibration	automatic one or two points at 0, 100% or one custom point
Atmospheric Pressure	Range	450 to 850 mm Hg; 17.72 to 33.46 in Hg; 600.0 to 1133.2 mbar; 8.702 to 16.436 psi; 0.5921 to 1.1184 atm; 60.00 to 113.32 kPa
	Resolution	0.1 mm Hg; 0.01 in Hg; 0.1 mbar; 0.001 psi; 0.0001 atm; 0.01 kPa
	Accuracy	± 3 mm Hg within $\pm 15^\circ\text{C}$ from the temperature during calibration
	Calibration	automatic at one custom point
Temperature	Range	-5.00 to 55.00°C ; 23.00 to 131.00°F ; 268.15 to 328.15K
	Resolution	0.01°C ; 0.01°F ; 0.01K
	Accuracy	$\pm 0.15^\circ\text{C}$; $\pm 0.27^\circ\text{F}$; $\pm 0.15\text{K}$
	Calibration	automatic at one custom point
Additional Specifications	Temperature Compensation	automatic from -5 to 55°C (23 to 131°F)
	Logging Memory	45,000 records (continuous logging or log-on-demand of all parameters)
	Logging Interval	one second to three hours
	PC Connectivity	via USB (with Hanna PC software)
	Environment	0 to 50°C (32 to 122°F); RH 100% IP67
	Battery Type / Life	1.5V AA batteries (4) / approximately 360 hours of continuous use without backlight (50 hours with backlight)
	Dimensions / Weight	185 x 93 x 35.2 mm (7.3 x 3.6 x 1.4") / 400 g (14.2 oz.)



HI98194 includes:



HI7698194/4
probe



HI7698194-0
pH sensor



HI7698194-3
EC sensor



HI7698194-2
DO sensor



HI9828-25
quick calibration
solution



HI76981942
probe maintenance
kit

HI98195 includes:



HI7698195/4
probe



HI7698194-0
pH sensor



HI7698194-3
EC sensor



HI9828-25
quick calibration
solution



HI76981952
probe maintenance
kit



HI98196 includes:



HI7698196/4
probe



HI7698194-0
pH sensor



HI7698194-2
DO sensor



HI9828-25
quick calibration
solution



HI76981942
probe maintenance
kit



rugged carrying case
with custom insert



HI76981943
calibration beaker



HI9298194 PC software



HI920015 micro USB cable



quality certificate



instruction manual



1.5V AA batteries (4)



Wolf Laboratories Limited

www.wolflabs.co.uk

Tel: 01759 301142

Fax: 01759 301143

sales@wolflabs.co.uk



Use the above details to contact us if this literature doesn't answer all your questions.

Pricing on any accessories shown can be found by keying the part number into the search box on our website.

The specifications listed in this brochure are subject to change by the manufacturer and therefore cannot be guaranteed to be correct. If there are aspects of the specification that must be guaranteed, please provide these to our sales team so that details can be confirmed.

