



2xOF1202-40MQ6 Oil Free Compressor with Dryer

JUN-AIR®



Features

- 100% oil free
- 100% duty cycle
- Low noise and vibration level
- Easy maintenance
- Long-life, 2-year warranty
- 8000 hours cup life at 8bar
- 4000 hours maintenance interval for the dryer

Description

- Built-in 2-column adsorption dryer
- Pressure dew point down to -40°C
- 1µm air filtration (class 2 for dust according to ISO8573.1:2001)
- Pressure regulator included
- Receiver with internal coating and 5-year warranty


Other Versions

- Without dryer: 2xOF1202-40M
- Other power supply: 400V - 3 phases

Product Specifications


| Model | 2xOF1202-40MQ6 | | |
|-----------------|----------------|----------|-------|
| Voltage | V | 1x230 | 1x230 |
| Frequency | Hz | 50 | 60 |
| Motor | HP | 4 | 4 |
| | kW | 2.94 | 2.94 |
| Displacement | l/min | 580 | 658 |
| Air flow @ 8bar | l/min | 208 | 234 |
| | cfm | 7.35 | 8.3 |
| Max. pressure | bar | 8 | 8 |
| | psi | 120 | 120 |
| Max. current | A | 16 | 18 |
| | litres | 40 | 40 |
| Receiver volume | gallon | 10.6 | 10.6 |
| | kg | 179 | 179 |
| Weight | lbs | 395 | 395 |
| | Noise level | dB(A)/1m | 63 |
| Duty cycle | | 100% | 100% |

Air Flow / Pressure Curve*

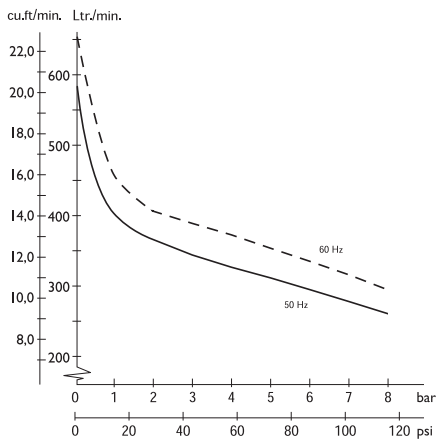

*air flow is reduced by approx. 18-20% on units with dryer

Dimensions*

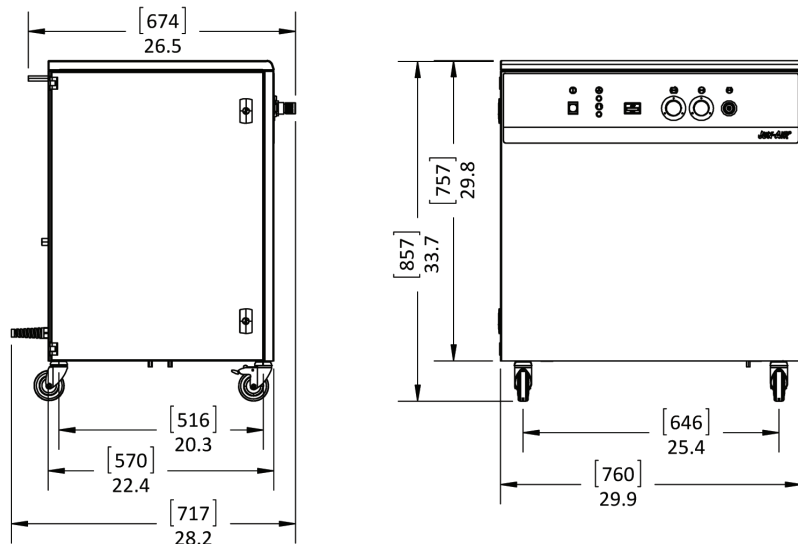

*for unit without accessories or options



Wolflabs

Wolf Laboratories Limited

www.wolflabs.co.uk

Tel: 01759 301142

Fax: 01759 301143

sales@wolflabs.co.uk



Use the above details to contact us if this literature doesn't answer all your questions.

Pricing on any accessories shown can be found by keying the part number into the search box on our website.

The specifications listed in this brochure are subject to change by the manufacturer and therefore cannot be guaranteed to be correct. If there are aspects of the specification that must be guaranteed, please provide these to our sales team so that details can be confirmed.

