



# Product Code: EP700L 41-106

## Single door freezer cabinet

---



The EcoPro G3 range of cabinets offers a combination of cutting-edge refrigeration technology, low running costs and reliability, making them the first choice for the foodservice professional.

## Features & Benefits

---


- Foster Shield provides advanced temperature control and hygienic design, protecting from the dangers of unsafe food storage. With air distribution optimised by CFD design technology, efficient operation is assured, even when shelves are fully loaded
- With PureControl, the G3's controller display uses pure LEDs, incorporating InGaN technology, which means it achieves higher resolution, lasts longer - all while using less power. Through the simple addition of a gateway, you're connectivity-ready
- Fitted with our new and improved +stayclear condenser which helps increase product life and reduce energy consumption, +stayclear helps your low energy fridge stay a low energy fridge. Now fitted across the cabinet and counter range as standard
- Market leading usable capacity, now supplied with 4 shelves as standard making your money go further – holds more than a conventional fridge
- High quality 304 stainless steel is used as standard on all doors and unit covers for G3 – the gold standard in performance stainless steel – meaning the heaviest usage touchpoints on the product are covered
- Operates efficiently in ambient temperatures of up to 43°C

Shelving		Base Fittings		Doors	
Extra heavy duty shelving	Option	Castors 80mm	Standard	Solid	Standard
4 shelves (GN2/1)	Standard	Legs 150mm	Option	Left Hand Hinged Door	Option
Refrigeration		Electrical & Service Data		Product Extras	
R290 - Energy Efficient	Standard	230/50/1	Standard	Helicoil Mains Lead	Option
Integral Refrigeration System	Standard	220/60/1 Electrical Supply	Option	Energy	
Less Condensing Unit	Option	Fuse Required (A)	10		
Specification		Finish		AEC	1161
Gross volume (ltrs)	600	s/steel ext, 304 s/s door & alu int	Standard	Nett Volume	479.9
Freezer -18/-21°C	Standard	304 S/S back for island sitting	Option	Energy Grade	B
Width (mm)	700			Energy Efficiency Index	30.25
Depth (mm)	855				
Height (mm)	2080				

## Footnotes

- Castors not available if product supplied less condensing unit
- Adequate airflow and service space must be kept above the top of cabinet: 100mm
- Depth with door open is 1500mm

# Energy Performance Data and information

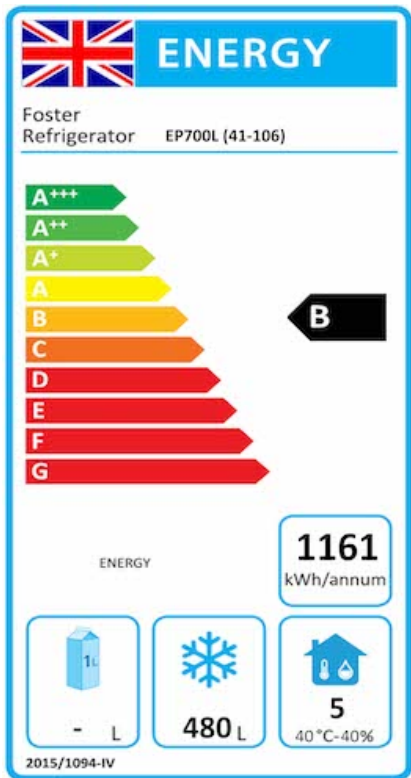

### Application


This appliance is intended for use in ambient temperatures up to 40°C

### Safety

Precautionary instructions and maintenance advice, to ensure efficient operation, can be found in this products operating instructions.

### Recycling

For recycling and end of life care for this product, please refer to environmental section of the website or visit [our policies](#)

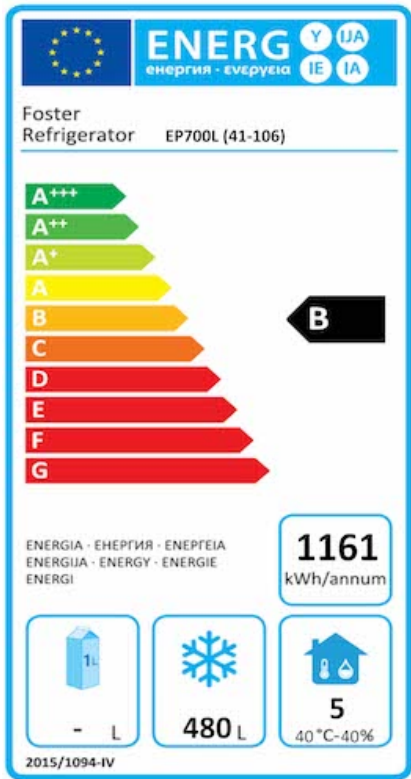

The Refrigeration Experts

All images shown are for illustration purpose only. All images and photographs are not intended to be relied upon for, nor to form part of, any contract unless specifically incorporated in writing into the contract. Solely the dimensions and specifications incorporated in the quotation or purchase order confirmation shall be contractually binding.



# WolfLabs

**Pricing on any accessories shown can be found by keying the part number into the search box on our website.**

The specifications listed in this brochure are subject to change by the manufacturer and therefore cannot be guaranteed to be correct. If there are aspects of the specification that must be guaranteed, please provide these to our sales team so that details can be confirmed.

**[www.wolflabs.co.uk](http://www.wolflabs.co.uk)**

**Tel : 01759 301142**

**Fax : 01759 301143**

**[sales@wolflabs.co.uk](mailto:sales@wolflabs.co.uk)**

Please contact us if this literature doesn't answer all your questions.