


HM1800 HOD

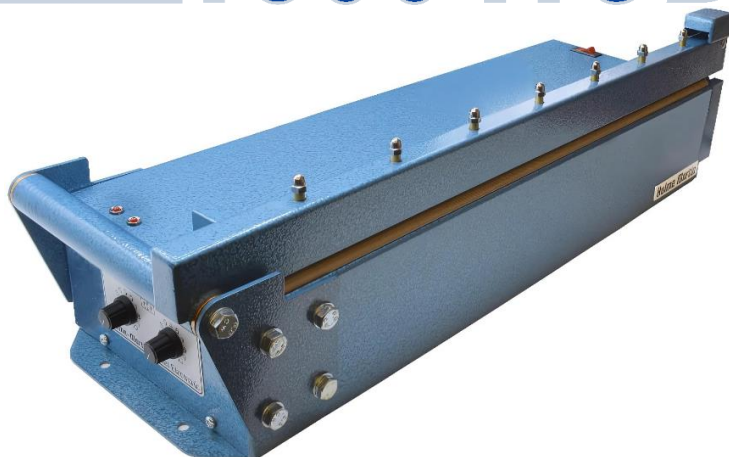

(Foot Operated, Medium Capacity Impulse Heat Sealer) – Part No. 18102052

Maximum Sealing Length	490mm (18")
Seal Width	6mm (Wide)
Film Thickness	2 x 1000 gauge (4 x 250 micron)
Voltage	240V, 110V (Conversion)
Power Consumption (Watts)	560W (per seal)
Fuse Rating	T 3.15 amp
Footprint	607mm (L) x 190mm (W) x 150mm (H)
Weight	12 Kg
Operation	Hand Operated (with Hold Down Latch)
Mounting	Bench or Wall Mounted
Options	T-Wire (Seal-Cut-Seal), Round Wire (Cut-&-Seal), Rollers/Brackets & Retainers (for Layflat Tubing), 3mm (Standard) seal - Emboss Alphanumeric Characters for use ONLY with 6mm (Wide) seal

The HM 1800 HOD – Medium Capacity Impulse Heat Sealer

For applications requiring hand operation & wide opening jaws, the HM1800 series can be supplied in this HOD version.

Fitted with a 6mm element enabling production of a tamperproof security coded seal.

An optional narrow element can be supplied for reduced sealing times (on thicker materials not requiring the embossed code).

A Dual Timer control enables both heating & cooling cycle time to be adjusted for different materials, the hold down latch (HOD) releases the operator during the 3-7 second sealing cycle, to prepare the next pack.

This machine is simple to maintain with consumable spares being easy to fit & available from stock.