




HULME MARTIN HEAT SEALERS

HULME MARTIN HEAT SEALERS

HM 305 CTD

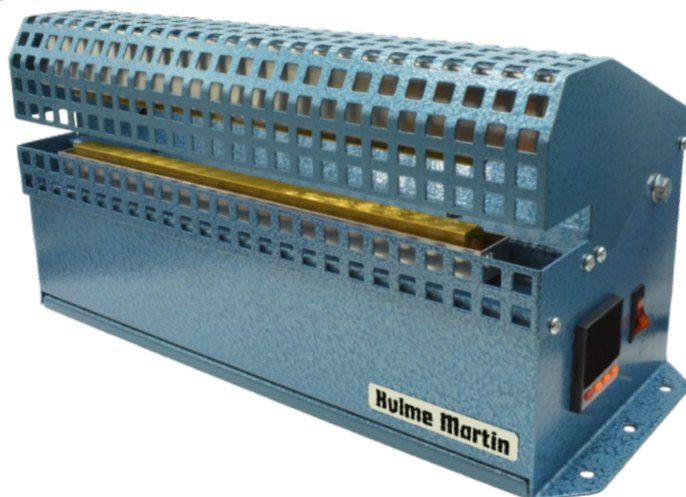

(Constant Heat/Crimp Sealer) – Part No. 30525082

Maximum Sealing Length	300mm (12")
Seal Width	12mm (Crimp Seal)
Voltage	240V, 110V (Conversion)
Power Consumption (Watts)	460W (per seal)
Fuse Rating	T 3.15 amp
Footprint	450mm (L) x 180mm (W) x 215mm (H)
Weight	10.7 Kg
Operation	Foot Operated (via Chain & Pedal)
Mounting	Bench Mounted
Options	12mm (Flat Seal), Stand Kit

The **HM 305 CTD** – Constant Heat/Crimp Sealer

For high-integrity (12mm Wide Crimp Seal) on cellophane, polypropylene, heavy duty barrier foils, coated papers and other laminates.

Both the upper and lower jaws are heated for use with heavier materials or gusseted bags. The machine's temperature is digitally controlled, with a Digital Thermal Fuse - fitted for excess temperature protection.

This allows for consistent and easy temperature selection up to 180°C, which is lockable to prevent user intervention.

This Constant Heat Sealer is commonly used for coffee & tea producers, who use gusseted foil & paper bags to ensure a professional seal.



WolfLabs

Pricing on any accessories shown can be found by keying the part number into the search box on our website.

The specifications listed in this brochure are subject to change by the manufacturer and therefore cannot be guaranteed to be correct. If there are aspects of the specification that must be guaranteed, please provide these to our sales team so that details can be confirmed.

www.wolflabs.co.uk

Tel : 01759 301142

Fax : 01759 301143

sales@wolflabs.co.uk

Please contact us if this literature doesn't answer all your questions.